


For 3" wide frame

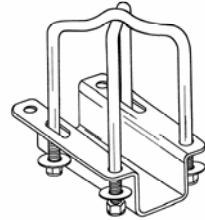

For 2" wide frame

INSTALLING BUNKBOARD STYLE BOAT GUIDE

P/N 27600

1. Place u-bolts as shown above for either 2" wide or 3" wide frame
2. Use 1 flat u-bolt and 1 formed u-bolt with washers and nuts to loosely attach each u-shaped bracket under or on top of trailer frame at desired locations. Distance apart is determined by the configuration of your frame and the 5 ft. length of the bunkboard.
3. Insert the short end of the guide-on upright posts into each of the u-brackets to the desired width.
Do not fully tighten bolts.
4. Make sure the upright posts are seated level in the u-brackets and the brackets are set the correct distance apart before completely tightening the u-bolts. Finish tightening the u-bolt connections.
5. Loosely attach the swivel brackets in the top holes of the uprights with 3/8"-16 x 2-1/4" hex head bolts, 3/8" USS flat washers and 3/8"-16 nylon locknuts.
6. Lay a carpeted bunk board on top of each side pair of swivel brackets. Adjust lengthwise to center. Mark location of attaching holes
7. Carpeted bunkboards are attached to swivel brackets with 1-1/4" wood screws. It may be easier to temporarily remove the swivel brackets from the uprights to accomplish this.
8. Adjust the angle of the bunkboards to fit your boat and tighten the swivel connections to hold in place.
9. Insert a black plastic cap at the top of each upright tube.

TOOLS REQUIRED =
2-- 9/16" WRENCHES
1-- PHILLIPS SCREWDRIVER

NOTE:
If desired, use P/N 27630A galvanized
Bracket kit for raised mounting of
Trailer tail lights

PARTS INCLUDED	
4---Galv. Tube uprights	27609PG
2---60" Carpeted bunks	27821
4---Galv. Swivel brackets	10201PG
4---Galv. U-brackets	27603PG
4---Black plastic caps	11332
20---3/8"-16 Nylon locknuts	10810
20---3/8" USS flat washers	10960
8---#14 x 1-1/4" Wood screws	11005
4---3/8"-16 x 2-1/4" Hex head bolts	11022
4---3/8"-16 x 3-1/2" x 5" U-bolts	15258
4---3/8"-16 x 3-1/2" x 5" Formed u-bolts	15259