

CLASS 2 TRAILER HITCH

R2-0159

Town & Country/ Caravan/ VW Routan

TOOLS REQUIRED:



DRILLS: NONE

WRENCHES: 13mm, 15mm, 18mm

3,500 LB GROSS TRAILER WEIGHT, 300 LB TONGUE WEIGHT. WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS AND LIMITATIONS. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

WARNING: USE ONLY RIGID HITCH APPROVED AND MANUFACTURED DRAW BAR INSERT OR WARRANTY WILL BE VOID

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

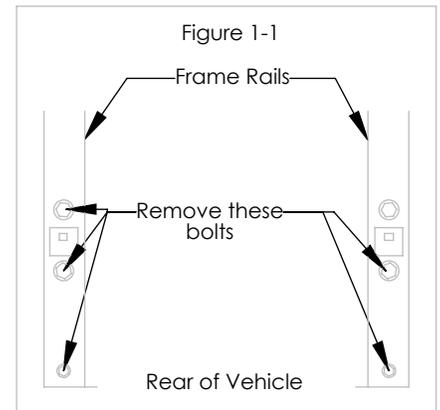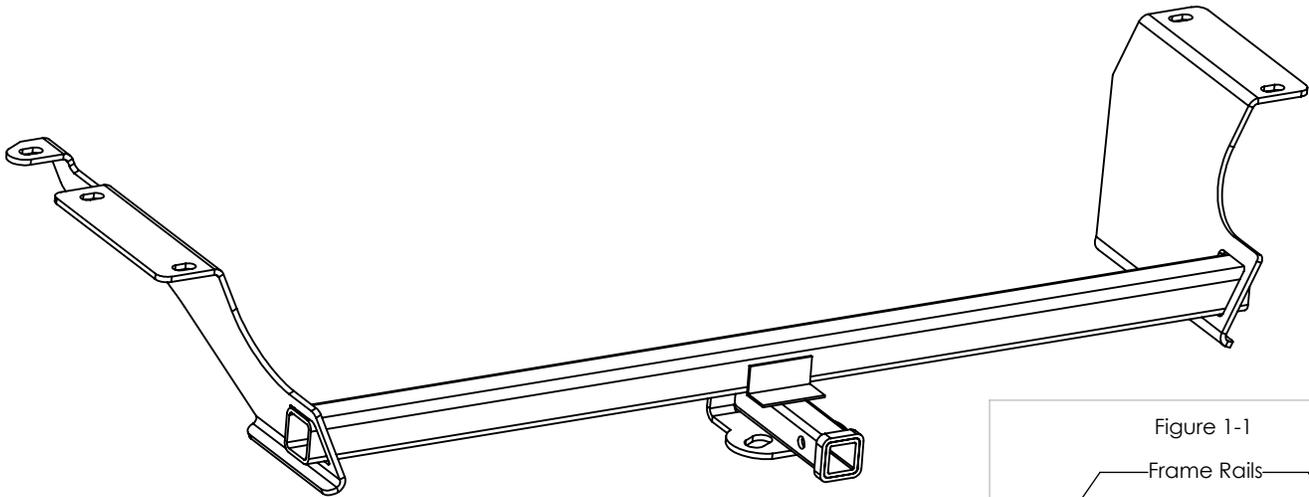

1. Temporarily lower exhaust by removing the bolt that attaches the rearmost exhaust hanger to the passenger side frame rail. Save bolt for reinstallation.
2. Remove the existing bolts from frame rails as shown in Figure 1-1, (3) on drivers side, (2) on passenger side, and save for reinstallation.
3. Raise hitch into position and attach with existing bolts removed in step 2. Leave bolts loose.
Note: Some models have AC lines on passenger side, use care not to damage.
4. Push hitch toward driver side to create maximum clearance for exhaust, and tighten bolts to proper torque specifications shown below.
5. Raise exhaust back into position and reinstall bolt removed in step 1

TIGHTEN ALL FASTENERS TO THE TORQUE SPECIFICATIONS SHOWN BELOW

Hardware: Uses existing hardware

R2-0308 Draw Bar Kit

GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER

BOLT TIGHTENING TORQUE (LB-FT)			
BOLT SIZE	TORQUE	BOLT SIZE	TORQUE
3/8"	25 LB FT	8MM	20 LB FT
7/16"	50 LB FT	10MM	38 LB FT
1/2"	60 LB FT	12MM	68 LB FT
3/4"	120 LB FT		

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

RIGID[®]
HITCH INCORPORATED
 3301 WEST BURNSVILLE PARKWAY
 BURNSVILLE, MN 55337

REV.
7/15