

CLASS 3 TRAILER HITCH

R3-0128


Dodge Journey

TOOLS REQUIRED:

WRENCHES: Ratchet, Torque Wrench,
Socket Extension, 7/8" Socket

HITCH RATING: 4,000 LBS WEIGHT CARRYING, 400 LBS TONGUE WEIGHT / 4,000 LBS WEIGHT DISTRIBUTING, 400 LBS TONGUE WEIGHT.
WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS. DO NOT EXCEED VEHICLE'S RECOMMENDED TOWING CAPACITY. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

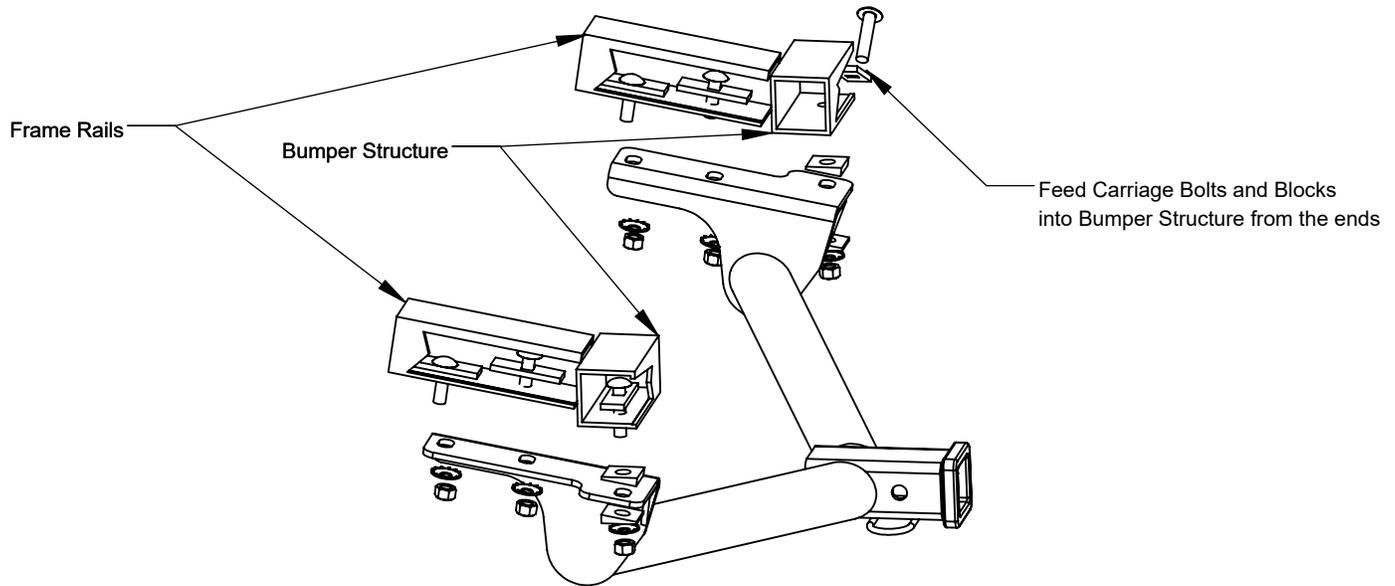


1. Lower the exhaust and mufflers by removing all rubber isolators behind the rear axle. Support the exhaust before removing the isolators to prevent damaging the vehicle.
2. Using the fish wires provided insert the 2-1/2" carriage bolts and block plates provided into the ends of the bumper beam and down through the rearmost attachment holes (1 per side). Leave the fish wires attached.
3. Using the remaining fish wires provided insert the 1-3/4" carriage bolts and block plates into the frame rails (2 per side) utilizing the square access hole in the frame rails just ahead of the forward most attachment hole. Leave the fish wires attached.
4. Feed a wedge spacer over the rearmost carriage bolts (1 each side), and tape to the bottom of the bumper beam. Orient the spacers so that the thickest part faces the rear of the vehicle.
5. Raise the hitch into position feeding all six of the fish wires through the attachment slots on the hitch. Remove the fish wires and secure the four forward attachments with a conical washer and hex nut provided. Place a wedge spacer on each rear attachment bolt with the thickest part of the spacer facing forward on the vehicle. Secure each with a conical washer and hex nut.
6. Tighten all fasteners to 60 LB-FT
7. Raise the exhaust back into position, and reattach all rubber isolators

Hardware Package:

- | | |
|------------------------------------|---------------------------|
| (2) 1/2-13 x 2-1/2" Carriage Bolts | (6) 1/2-13 Heavy Hex Nuts |
| (4) 1/2-13 x 1-3/4" Carriage Bolts | (4) 5/8" Wedge Spacers |
| (6) 1/2" Conical Washers | (6) 1/2" Fish Wires |
| (6) 1/4 x 1 x 3" Block Plates | |

GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER

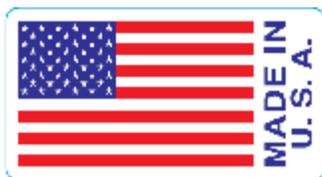

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

RIGID[®]
HITCH INCORPORATED
3301 WEST BURNSVILLE PARKWAY
BURNSVILLE, MN 55337

REV.
7/17