


**CLASS 3 TRAILER HITCH
R3-0162
Jeep Wrangler**


**TOOLS REQUIRED:
DRILLS: None
WRENCHES: Ratchet, Torque Wrench, 3/4"
Combination Wrench, 18mm, 3/4" Sockets**

**HITCH RATING: 3,500 LBS WEIGHT CARRYING, 350 LBS TONGUE WEIGHT / 4,000 LBS WEIGHT DISTRIBUTING, 400 LBS TONGUE WEIGHT.
WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS. DO NOT EXCEED VEHICLE'S RECOMMENDED TOWING CAPACITY. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.**

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

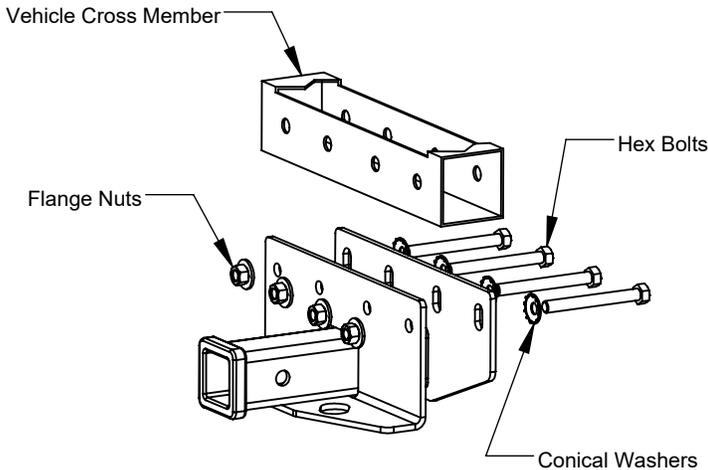

Standard Installation

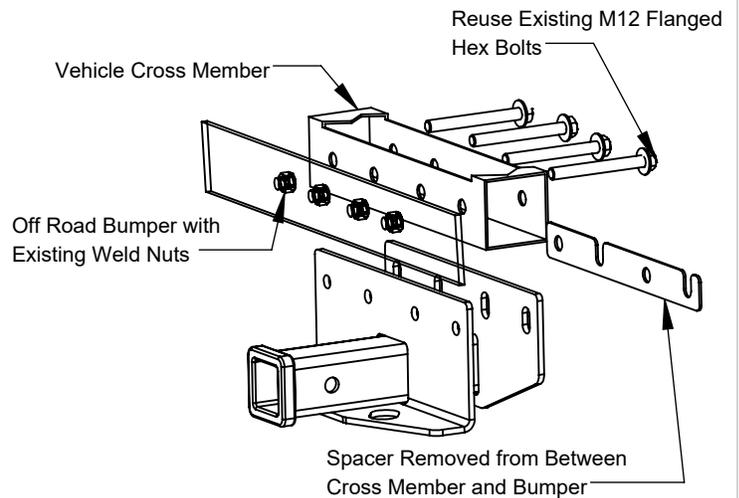

Vehicles Equipped with MOPAR Off Road Bumper #82213654

Note: If the vehicle is equipped with an OEM tow hook, the tow hook must be removed and returned to the vehicle owner.

Standard Installation:

1. Detach the rubber isolators from the muffler and lower exhaust.
2. Raise the hitch into position and align the holes in the hitch with the holes in the cross member on the vehicle.
Note: When the hitch is located properly it will be centered in the existing rectangular cutout in the bottom of the bumper fascia.
3. Insert the four 1/2-13 x 4-1/2" hex bolts with conical washers through the holes in the hitch and the cross member of the vehicle and secure with the four 1/2-13 flange nuts provided. Torque all fasteners to 60 LB-FT.
4. Raise the exhaust back into position and reattach the rubber isolators to the muffler.


Installation on vehicles equipped with the Off Road Bumper:

1. Detach the rubber isolators from the muffler and lower exhaust.
2. Remove the (4) M12 flange bolts from the forward side of the cross member. Remove the spacer plate sandwiched between the cross member and the off road bumper, and return to the vehicle owner.
3. Raise the hitch into position aligning the hitch with the holes in the vehicle cross member and reinstall the (4) M12 flange bolts removed in step 2 into the existing weld nuts on bumper. Torque all fasteners to 75 LB-FT.
4. Raise the exhaust back into position and reattach the rubber isolators to the muffler.

Hardware Package:

- (4) 1/2-13 x 4-1/2" hex bolts
- (4) 1/2" conical washers
- (4) 1/2-13 flange hex nuts

GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER

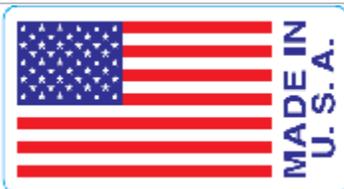

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

RIGID[®]
HITCH INCORPORATED
3301 WEST BURNSVILLE PARKWAY
BURNSVILLE, MN 55337

REV.
10/16