


**CLASS 3 TRAILER HITCH  
R3-0394  
Hyundai Santa Fe/ Kia Sorento**

**TOOLS REQUIRED:  
DRILLS: NONE  
WRENCHES: 18mm**

HITCH RATING: 3,500 LBS WEIGHT CARRYING, 350 LBS TONGUE WEIGHT / 5,000 LBS WEIGHT DISTRIBUTING, 500 LBS TONGUE WEIGHT.  
WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS. DO NOT EXCEED VEHICLE'S RECOMMENDED TOWING CAPACITY. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

**NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE**

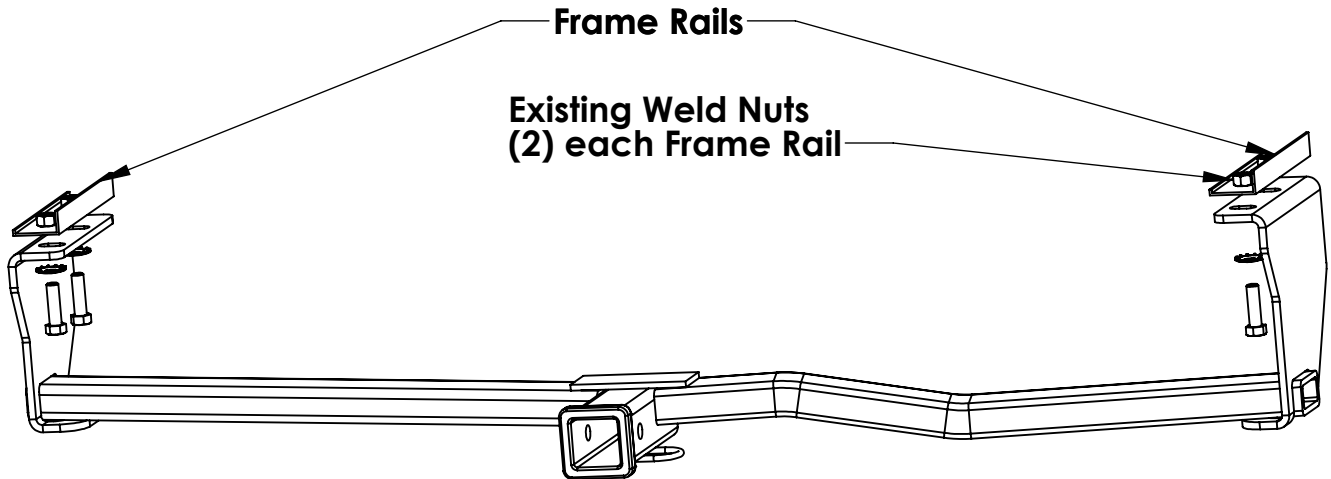

1. Raise hitch into position and secure by threading (4) M10 hex bolts and conical washers into the four existing weld nuts (2 each side) in the vehicle frame rails.
2. Tighten all fasteners to the appropriate torque specifications.

**Thank You for Purchasing a Rigid Hitch**

**TIGHTEN ALL FASTENERS TO THE TORQUE SPECIFICATIONS SHOWN BELOW**

**Hardware Package:**

(4) M10 x 1.25 x 30mm Hex Bolts (4) 7/16" Conical Washers

**GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER**

BOLT TIGHTENING TORQUE (LB-FT)			
BOLT SIZE	TORQUE	BOLT SIZE	TORQUE
3/8"	25 LB FT	8MM	20 LB FT
7/16"	50 LB FT	10MM	38 LB FT
1/2"	60 LB FT	12MM	68 LB FT
3/4"	120 LB FT		

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

**RIGID<sup>®</sup>**  
**HITCH INCORPORATED**  
3301 WEST BURNSVILLE PARKWAY  
BURNSVILLE, MN 55337

REV.  
7/16