


CLASS 3 TRAILER HITCH
R3-0398
 Nissan Frontier/Suzuki Equator

TOOLS REQUIRED: Ratchet, Torque Wrench,
 Socket Extension
 DRILLS: None
 Socket: 19mm

HITCH RATING: 5,000 LBS WEIGHT CARRYING, 500 LBS TONGUE WEIGHT / 8,000 LBS WEIGHT DISTRIBUTING, 800 LBS TONGUE WEIGHT.
 WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS. DO NOT EXCEED VEHICLE'S RECOMMENDED TOWING CAPACITY. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

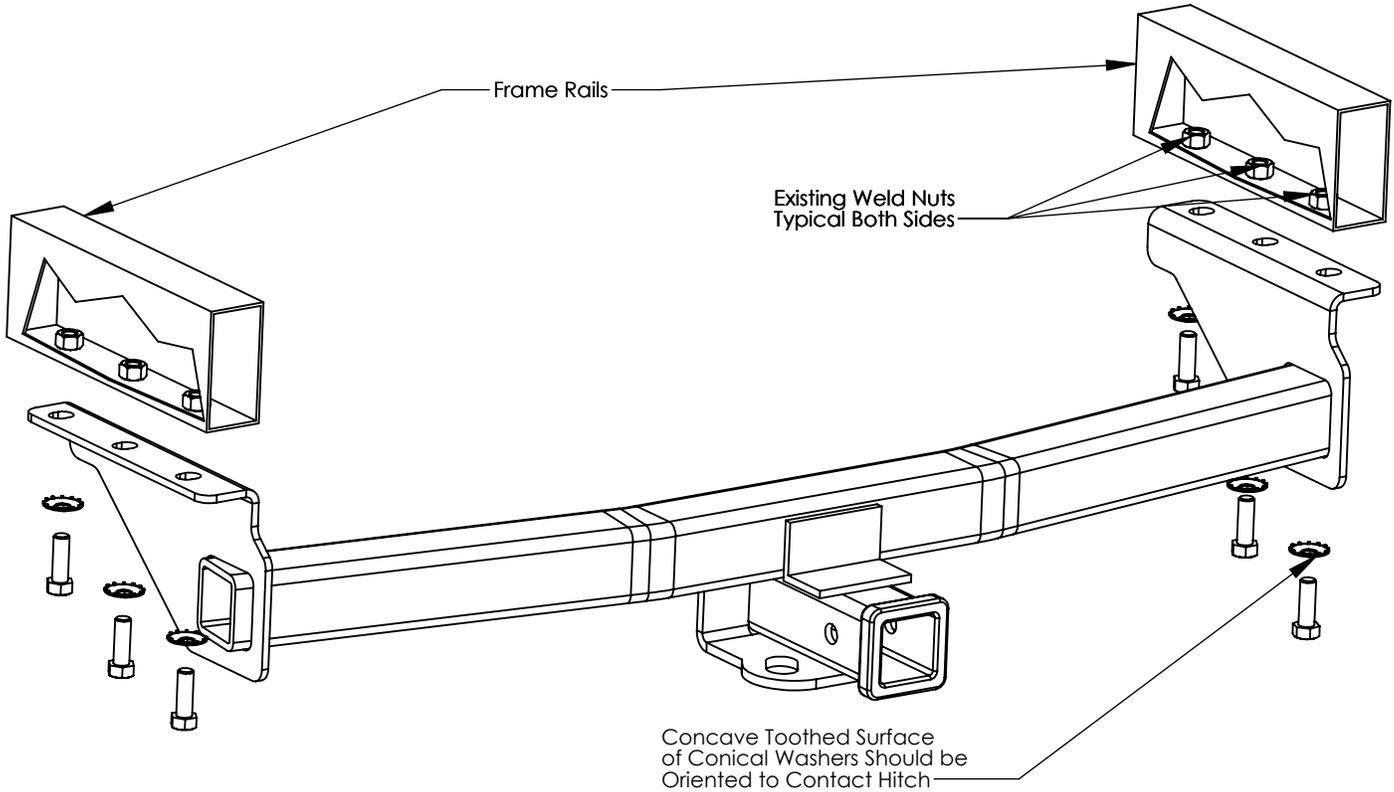

1. Raise the hitch into position and insert the six M12 hex bolts and conical washers into the six existing weld nuts in the frame rails.
2. Torque all fasteners to 68 LB-FT.

Thank you for purchasing a Rigid Hitch

Hardware Package:

- (6) M12 x 1.25 x 35mm hex bolts
- (6) 1/2" conical washers

GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER

BOLT TIGHTENING TORQUE (LB-FT)			
BOLT SIZE	TORQUE	BOLT SIZE	TORQUE
3/8"	25 LB FT	8MM	20 LB FT
7/16"	50 LB FT	10MM	38 LB FT
1/2"	60 LB FT	12MM	68 LB FT
3/4"	120 LB FT		

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

RIGID[®]
HITCH INCORPORATED
 3301 WEST BURNSVILLE PARKWAY
 BURNSVILLE, MN 55337

REV.
 8/15