

CLASS 1 TRAILER HITCH

RT-509

Honda Accord

TOOLS REQUIRED:


DRILLS: NONE

WRENCHES: 10mm, 11/16"

2,000 LB GROSS TRAILER WEIGHT, 200 LB TONGUE WEIGHT. WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS AND LIMITATIONS. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

WARNING: USE ONLY RIGID HITCH APPROVED AND MANUFACTURED DRAW BAR INSERT OR WARRANTY WILL BE VOID

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

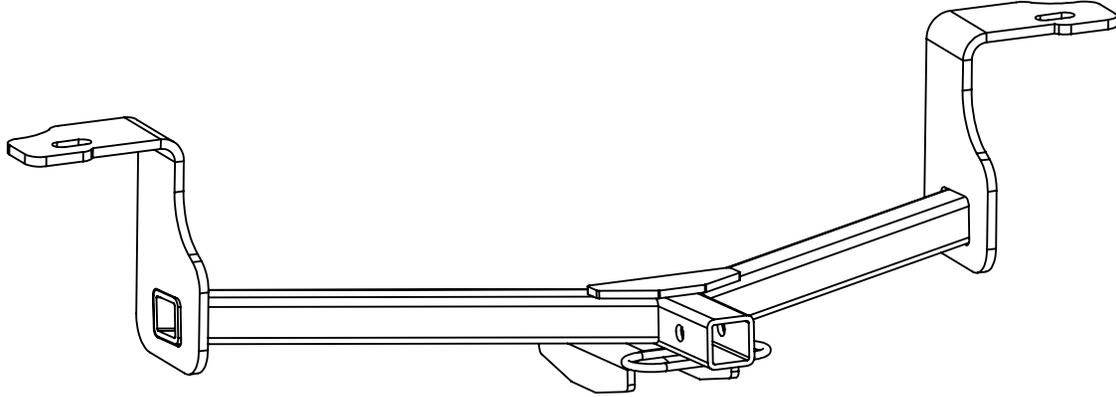

1. Lower the exhaust by disconnecting the rubber isolators (2 per exhaust canister).
2. Remove the heat shield(s) and underbody panel (if present). Save heat shield(s) for reinstallation. Return underbody panel (if present) to vehicle owner.
3. Using the fish wires provided insert a carriage bolt and block plate into each frame rail pulling up through the large round access hole in the frame rail near the rear axle and down through the mounting hole. Leave the fish wires attached at this time. (Note: the access hole may need to be enlarged to insert hardware).
4. Hang the U-Bolt on the tow hook.
5. Raise the hitch into position feeding fish wires through the mounting slots of the hitch side brackets. U-Bolt will utilize the appropriate mounting location depending on vehicle model.
6. Attach hitch using hex nuts and conical washers provided. Use care not to push carriage bolts back up into the frame rails.
7. Tighten all fasteners to the appropriate torque specifications shown below.
8. Reattach the heat shield(s). Bend heat shield(s) as necessary over the hitch. Trim minimally around new fasteners if needed.
9. Reattach the exhaust. Note if additional clearance is needed, bend the exhaust hanger bracket(s) welded to the frame rail downward.

TIGHTEN ALL FASTENERS TO THE TORQUE SPECIFICATIONS SHOWN BELOW

HARDWARE PACKAGE:	(2) 7/16-14 x 1-1/2" Carriage Bolts	(1) U-Bolt 3/8 x 1 x 1-1/2"	
	(2) 1/4 x 7/8 x 3" Block Plates	(2) 3/8" Conical Washers	(1) UB-5001 Draw Bar Kit
	(2) 7/16 Conical Washers	(2) 3/8" Hex Nuts	
	(2) 7/16 Hex Nuts	(2) 7/16" Fish Wires	

GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER

BOLT TIGHTENING TORQUE (LB-FT)			
BOLT SIZE	TORQUE	BOLT SIZE	TORQUE
3/8"	25 LB FT	8MM	20 LB FT
7/16"	50 LB FT	10MM	38 LB FT
1/2"	60 LB FT	12MM	68 LB FT
3/4"	120 LB FT		

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

RIGID[®]
HITCH INCORPORATED
 3301 WEST BURNSVILLE PARKWAY
 BURNSVILLE, MN 55337

REV.
4/14