

PART NUMBER

TSS-CTP




BEFORE YOU BEGIN

PRIMARY APPLICATION

- › Travel Trailers with offset frames requiring a contact plate for Trailer SumoSprings

TOOLS REQUIRED

- › Floor jack
- › Safety jack stands
- › Drill
- › 1/4" drill bit
- › 9/16" Socket

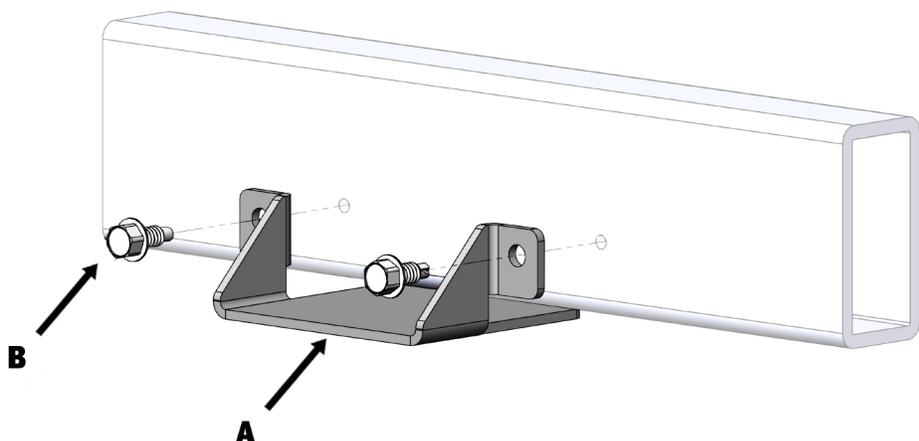

Item	Part #	Description	QTY
A	512171	TSS Contact Plate	2
B	512366	3/8 x 1" Self Tapping Screws	4

PASSENGER SIDE (DRIVER'S SIDE SIMILAR)

Part Number: TSS-CTP

› Product Line: TRAILER SUMOSPRINGS CONTACT PLATE

Page 1

SuperSprings International, Inc.

505 Maple Avenue
Carpinteria, CA 93013

Installation Support

+1 (800) 898-0705
support@supersprings.com

superspringsinternational.com

SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.

WARNING: These instructions are a general guide for installation. SuperSprings International, Inc. assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SuperSprings' products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a level surface, the parking brake is ON, with the ignition OFF, and place blocks in front of and behind the front tires to prevent the vehicle from moving.

DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touching the SuperSprings. Secure any cables out of the way with zip ties or by re-routing. **Ensure all A/C lines, brake cables, and frame are clear of contact or interference.**

Rev. 1.0 | May 2021

PART NUMBER

TSS-CTP



IMPORTANT NOTICE: Your part may have been loosley preassembled to show the final product as it will be once installed on your vehicle. Please disassemble the product before proceeding to the installation.

INSTALLATION

NOTE: This part should be installed after the installation of Trailer SumoSprings.

1. Start by using a floor jack to lift the trailer chassis enough to slide the contact plate [ITEM A] between the frame and the Trailer SumoSpring.
2. Center the contact plate over the Trailer SumoSpring with the tabs tight against the frame. Mark the center of the holes in the tabs and drill with a 1/4" drill bit.
3. Drive the self-tapping screws [ITEM B] into the holes in the frame with a drill or impact driver just enough to cut the threads into the frame.
4. Remove the bolts and add a drop of Loctite.
5. Install the bolts with a 9/16" socket and torque to 20 ft. .lbs.
6. Lower the trailer off the jack and ensure that the Trailer SumoSprings are now engaged with the new contact plate.
7. Register the warranty for your SuperSprings International part. A warranty card can be found in the box your part came in.